

# LASER BLADE LARGE

## ADJUSTABLE

TRIM / TRIMLESS MODEL : I.LBL1 - TR/TL - IC/CP - XXX - AXX - XX

## INSTALLATION SHEET


PAGE: 1 OF 2

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

### NEW CONSTRUCTION HOUSING INSTALLATION (IC/CP) DIMMING 0-10V (D10) OPTIONAL


#### STEP 1

- ENGAGE HANGER BARS (2X, **PROVIDED**) IN MOUNTING FRAME SLOTS AVAILABLE AND CONNECT THEM TOGETHER.
- FASTEN HANGER BARS TO CEILING BRACE WITH APPROPRIATE SCREWS (**BY OTHERS**).

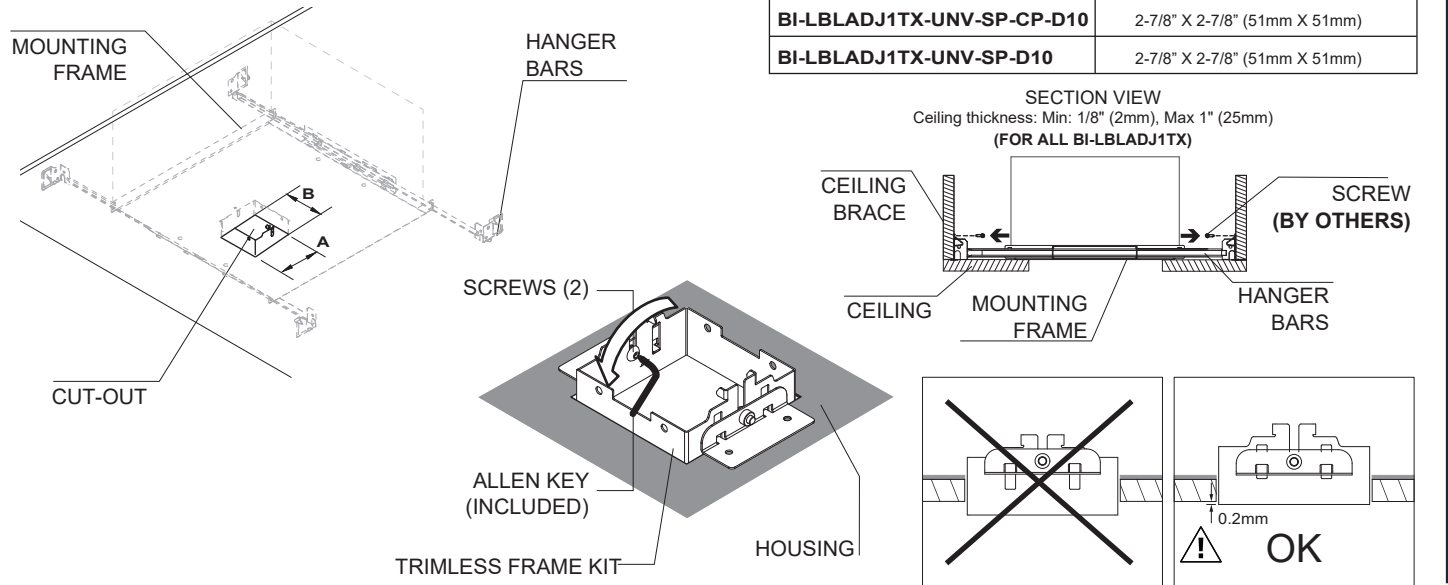

#### STEP 2

- REMOVE THE PHILLIPS HEAD SCREW OF THE JUNCTION BOX AND REMOVE COVER.
  - INSTALL BX (**BY OTHERS**) WITH 6" OF WIRE IN THE JUNCTION BOX.
  - MAKE ALL NECESSARY CONNECTIONS BETWEEN THE BRANCH CIRCUIT AND THE FIXTURE WITH MARRETES (**BY OTHERS**).
  - CLOSE JUNCTION BOX COVER AND SECURE WITH THE PHILLIPS HEAD SCREW.
  - CUT OUT OPENING AND INSTALL DRYWALL (SEE CUT-OUT DIMENSIONS TABLE)
- NOTE:** MOUNTING FRAME MUST BE FLUSH WITH CEILING BRACE (TRIMLESS VERSION ONLY)

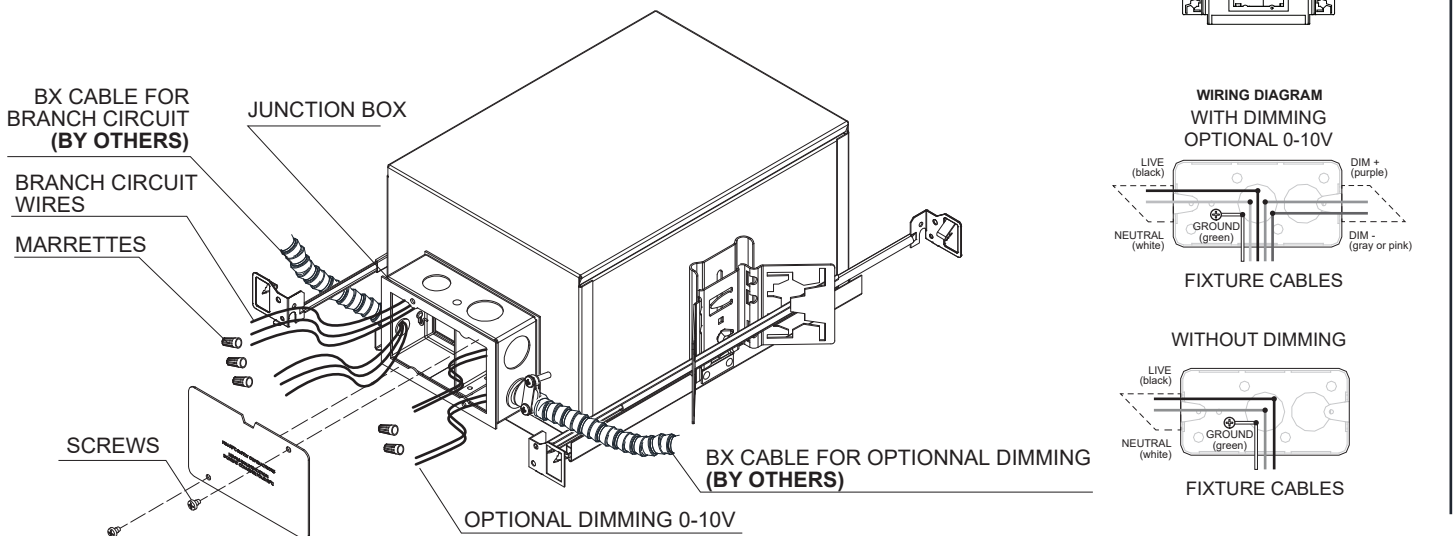

INS-5093

LAST UPDATE: August 04, 2021

CG - R1


# LASER BLADE LARGE

ADJUSTABLE

TRIM / TRIMLESS MODEL : I.LBL1 - TR/TL - IC/CP - XXX - AXX - XX


## STEP 3

- MAKE ALL NECESSARY CONNECTIONS BETWEEN THE BRANCH CIRCUIT AND THE DRIVER PANEL.

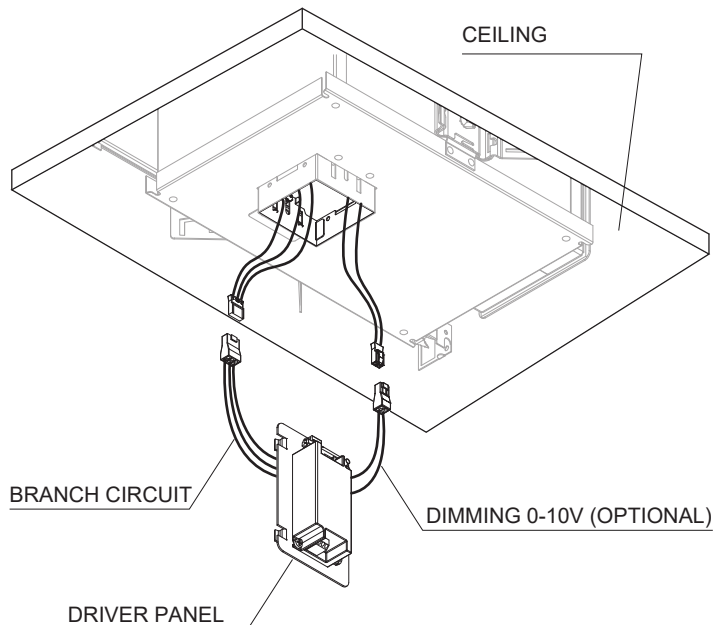


## STEP 4

- A - INSERT DRIVER PANEL IN THE CUT-OUT
  - B - PLACE THE DRIVER PANEL ON THE JUNCTION BOX BY INSERTING ITS LOWER PART IN THE DESIGNED SLOTS
  - C- CLIP THE DRIVER PANEL TO JUNCTION BOX
- NOTE: MAKE SURE ALL WIRES ARE INSIDE THE JUNCTION BOX BEFORE CLOSING IT

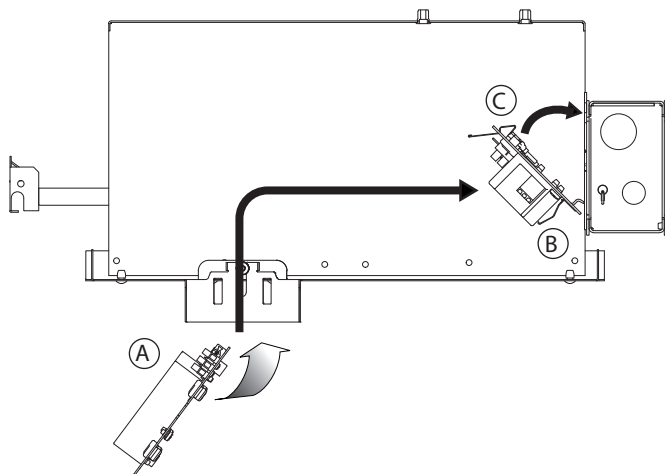

## STEP 5

- MAKE ALL NECESSARY CONNECTIONS BETWEEN THE DRIVER AND THE FIXTURE WITH REUSABLE CONNECTORS.

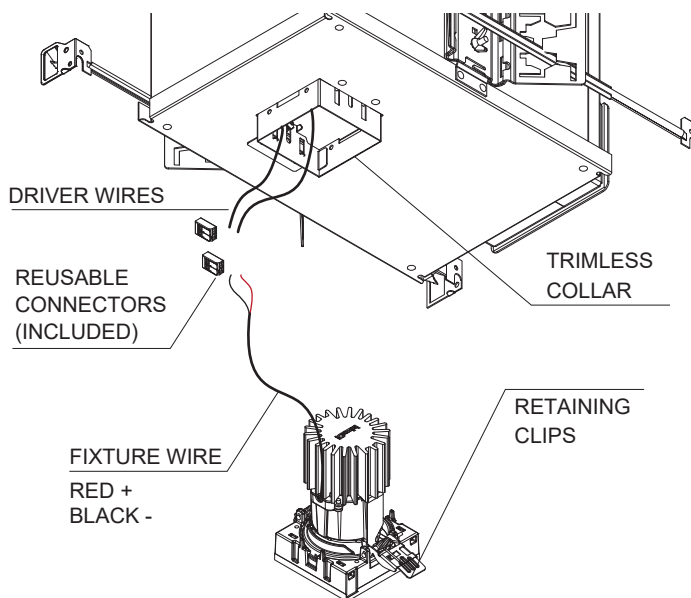

## STEP 6

- HOLD RETAINING CLIPS UPWARDS DURING INSERTION.

